



University of  
Stavanger

Faculty of Science  
and Technology

Stavanger, January 13, 2025

## ELE610 Applied Robot Technology, V-2025

### ABB robot assignment 1

In this first task you will be familiar with the ABB RobotStudio software package and the fairly comprehensive documentation that comes with it. The first 11 sections of this assignment should be done, sections 1.12 and 1.13 are optional but should be done if you have time.

Approval of the assignment can be achieved by showing the simulation to the teacher, and the group should submit, on *canvas*, the RAPID code. Note that the code file should be renamed into a txt-file (not the mod-file that Windows will interpret as a video file).

## 1 Introduction to RobotStudio

### 1.1 Install RobotStudio

It is an advantage that each group member has a laptop where RobotStudio is installed, thus allowing all group members to work on RobotStudio concurrently and also to work on RobotStudio elsewhere (at home). To install RobotStudio on your own laptop, it must have Windows 7, Windows 8.1 (perhaps only older versions of RobotStudio), or Windows 10. I have only tested RobotStudio on Windows 10. The new (january 2023) [ABB RobotStudio Technical data sheet](#) ↗ says Windows 10 or later. Thus, most of you will prefer to install [ABB RobotStudio](#) ↗ on your own Windows laptop computer. You can **not** install RobotStudio on an Apple computer.

You can also use RobotStudio on the PCs on your desk (work-place) in room E464. We should have everything correctly installed there when the course starts. The two PCs closest to the robots in E458 also have RobotStudio installed, actually several older versions of RobotStudio are installed on them, so be aware of which version you start. These PCs in 458 can be used to load programs onto the physical robots. A laptop with RobotStudio installed can also be used.

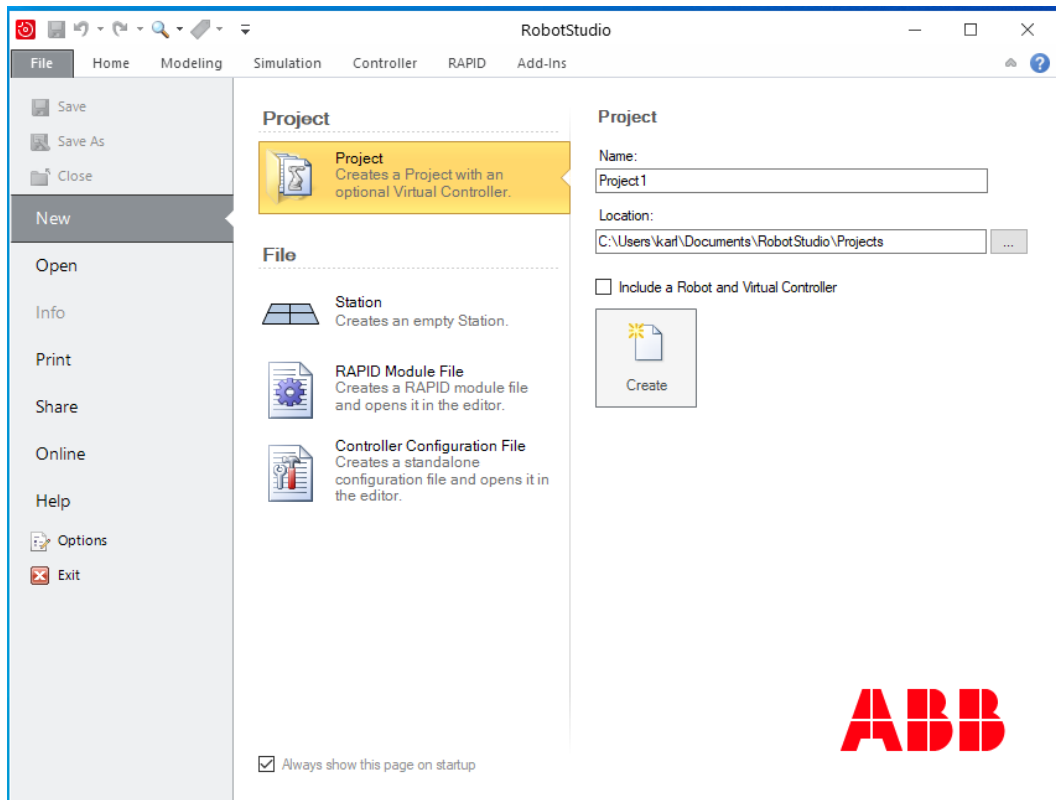


Figure 1: The RobotStudio start window as it is in present (2022) version.

You should install the correct<sup>1</sup> version of RobotStudio and RobotWare virtual controller on your (laptop) computer. The huge (approximate 2 GB) zip-file can be downloaded from [ABB web page ↗](#), but you have to register to get a link to the file. The file should also be available on the PCs in E462 and E464, on C:/ELE610/Prog/RobotStudio.yyyy.v.zip where yyyy.v is year and version number.

When the zip-file is downloaded to your laptop computer you unpack (unzip) it into a (temporary) catalog. Locate and run **Setup.exe**, and follow the installation wizard. Select full installation and use standard options. The program will be installed, perhaps in catalog C:/Programfiles(x86)/ABB/RobotStudio2022. The program **RobotStudio.exe** should be in the Bin catalog here, and you will probably want to make a shortcut to this program file from the desktop of your computer. You may start the program now and then get a window like shown in figure 1. But before you continue to create your project you should check out the three things in the following subsections. When you have decided where to store your projects, and have installed the RobotWare controller and have activated the license you create a new project.

<sup>1</sup>Normally it is preferred to install the newest version of RobotStudio.

### 1.1.1 Storing of projects and path problems

Important terms here are stations and projects, but also RAPID programs stored i modules and Virtual Controllers are important to understand. For complete information see RobotStudio Help, in particular section “Building Stations” part “Understanding stations and projects”. After a project is created you should look at the project catalog tree structure and see the files created. Can you locate the RAPID program module, it is a simple text file that can be viewed in any text editor.

The file paths used when RobotStudio stores files are<sup>2</sup> more restrictive than the Windows OS. There is, or may be, a problem using network-paths in file names. Also, several characters in RobotStudio file names (and catalog names) are prohibited, most notable spaces and perhaps special non-ANSI-127 letters. Below are two suggestions for solving these, or rather avoiding the problem:

- The more **simple** way:  
Use C-disk on your own computer or on the PC in laboratory, you may store your *projects or solutions* under `C:\ELE610\RobotStudio`.
- The more **flexible** way:  
You may still want to store your files in a particular catalog other than `C:\ELE610\RobotStudio`. This can be on your UiS network catalog (F-disk) `F:\Documents\RobotStudio` which may be the same as `C:\Users\username\Documents\RobotStudio` or `C:\Users\username\MyDocuments\RobotStudio`. Or somewhere on your DropBox (or any other cloud?) catalog, like `...\Dropbox\ELE610\RobotStudio`. Network and cloud catalogs sometimes(?) contain a special character, or string, that violate the strict RobotStudio limitations.

If you want to store (user) files in a particular catalog where the path violate the strict RobotStudio limitations this can be solved by using the SUBST command in a (command prompt) window:

```
C:\> subst R: C:\Users\username\Documents\RobotStudio
```

This should give you easy access to your RobotStudio files. Also, this is the way used in these ABB assignments to refer to (local) RobotStudio files; the catalog where you save your RobotStudio data is simply referred to as `R:\`.

In older versions it used to be rather confusing how RobotStudio stores and recovers files related to the project. This included the different versions of stations, programs and modules as well as (the connections to) controller, tools, and other elements used in the station. The saving-hints included in the

---

<sup>2</sup>Perhaps the latest versions of RobotStudio handle paths “as it should be”, but at least in older versions there are problems.

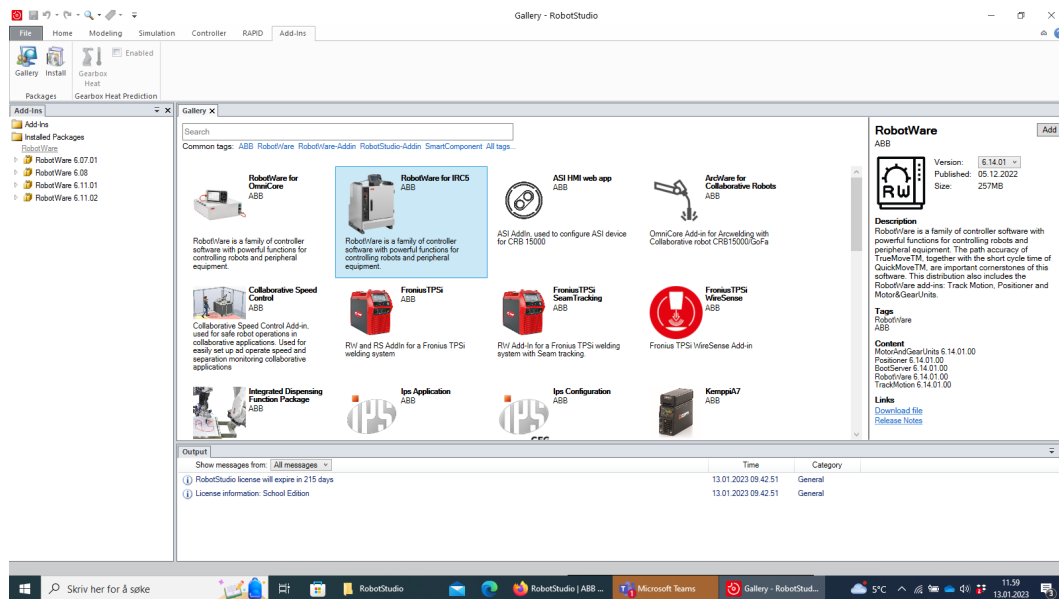


Figure 2: The RobotStudio Add-In window. You notice that 4 older versions of RobotWare are installed, but the newest one 6.14.04 is not installed yet.

RS assignments are more relevant for older versions of RobotStudio. It looks as this is now easier to handle as you now either save (update/overwrite) the same project, or save everything as a new project. The important thing is that you find a good way to store your work, a way that allows you to recover previous work.

Still, a good advice is to make copies, at least of the RAPID code files `*.mod`, on a disk you can always access, on your own laptop or a memory stick. After you have stored some projects you can look into the tree structure for each project and locate the RAPID code, perhaps named as `Module1.mod`. This is an ordinary text-file that can be viewed in any text editor.

**NOTE!** When you save a module as a text file somewhere, ex: Ctrl + S, the file you see in the RobotStudio editor will be the save file, and not the file connected to the Station `T_ROB1`. If you continue to edit this file it will not have any effect on the Station. You should close the file in the editor, and reopen the file connected to the Station `T_ROB1`. To save the file in the editor to the Station (denoted as Apply) the short cut is Ctrl + Shift + S.

### 1.1.2 RobotWare Controller

A *controller* is needed to program or simulate a program. RobotWare is the virtual controller that come with RobotStudio, it is installed from within RobotStudio. To do this an Add-In is needed:

From the startup screen, figure 1, select {Add-Ins}-tab. You may have to press

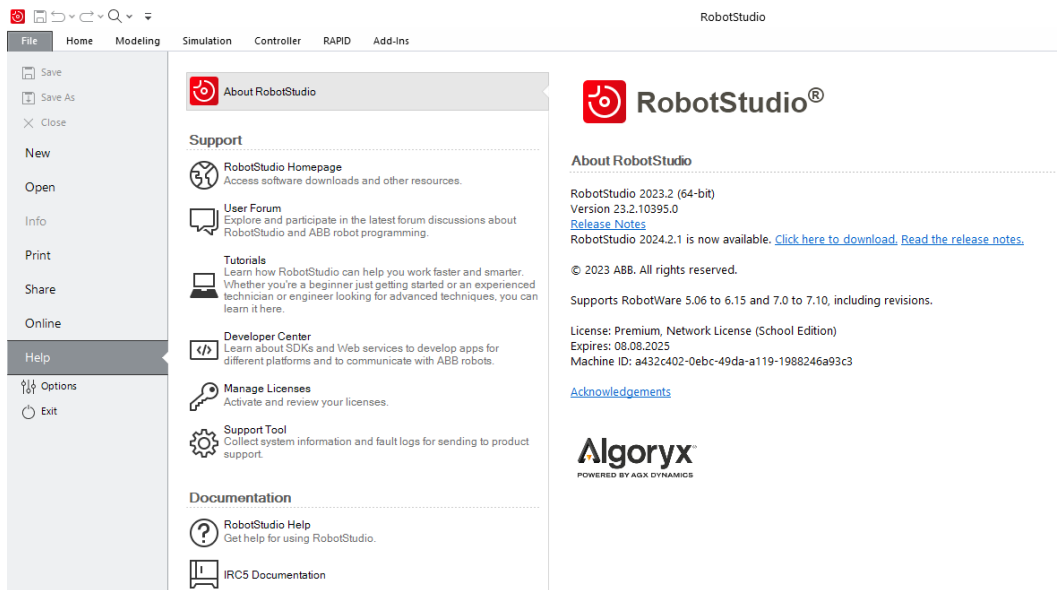


Figure 3: The RobotStudio Help window. Notice the documentation shown at the bottom in this image, and the About RobotStudio part to the right. Both version and license information is shown here.

the Gallery-icon to the left, and you see a screen like in figure 2. Select the [RobotWare for IRC5] Add-In. Details for this Add-In is shown in the right side-bar of the window, you may see that it is already installed and a **Remove** button is in the upper right part of the window. If it is not installed a **Add** button is shown, press on this to install the Add-In. A green bar in the lower right part of the window show installation progress. When it is added you can go back to the {Add-Ins}-tab.

When you install the latest version of RobotStudio, 2023.2 and newer, all the documentation is not included. In particular documentation on RobotWare which include RAPID instructions, functions and data types is not installed. This must also be installed as an Add-In, add the RobotWare Documentation Package for IRC5. Then the documentation should be available under File-Help-IRC5 Documentation part.

### 1.1.1.3 License

From the startup screen, figure 1, the {File}-tab is the active tab. Select [Help] (in the left sidebar) and you will see license information in the right part of the window, this is as shown in figure 3. To activate a license select [Manage Licenses], the dialog should be as in figure 4. Select Activate Wizard and you get a new dialog box as in figure 5. Here you should first specify a network license server and in the next dialog window enter the UiS license

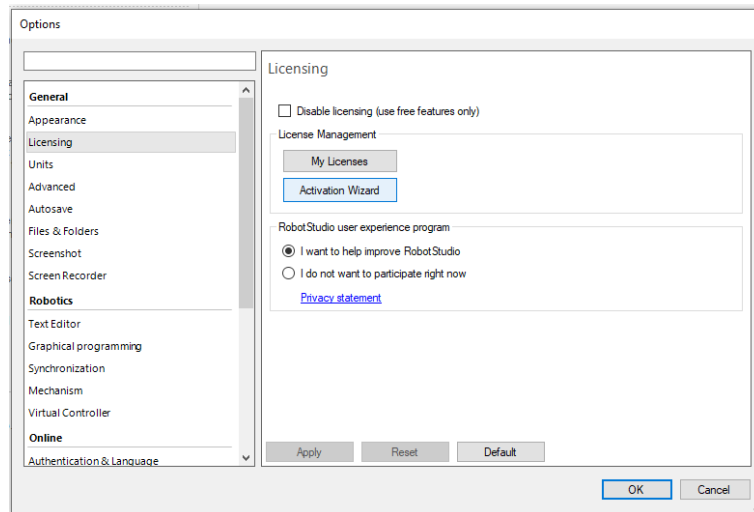


Figure 4: The RobotStudio Manage Licenses Options window

server, `rs.lm.ux.uis.no`, then when RobotStudio is restarted the license is activated.

To be able to use RobotStudio on a laptop from anywhere you have to start Licensing Activation Wizard (help Menu and Mange Licenses) figure 5, and on the bottom of the first dialog check “I want to check out or to check in a commuter license”, figure 6, and check out a commuter license for the wanted number of days, I suggest 30 days.

#### 1.1.4 Create new project

Restart RobotStudio and select “New” in the left part of the window, figure 1. Select project name, perhaps `RS1`. Give the location as where to store your projects. Check the “Include a Robot and Virtual Controller” check-box in the window and some new fields appear. If the controller location is correct<sup>3</sup> you select robot model as “IRB 140 6kg 0.81m and newest RobotWare version, this will update the Controller name. Leave “Custom options” and “Create from backup” open. Finally press the large Create icon. You have to confirm the IRB-140 robot in a popup-window. When this is done the window should be like in figure 7. If the lower right field in this window is green you may continue to learn RobotStudio.

<sup>3</sup>If not correct a yellow warning sign is shown and you need to correct this before you continue.

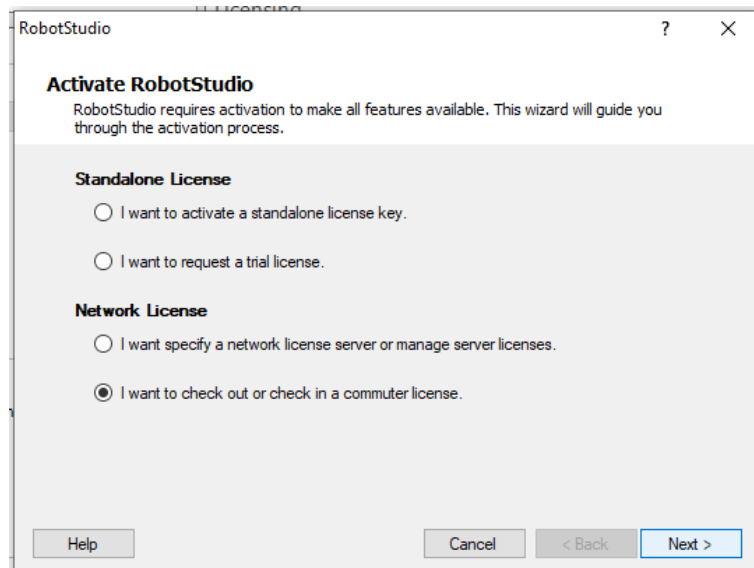


Figure 5: The RobotStudio Activate window

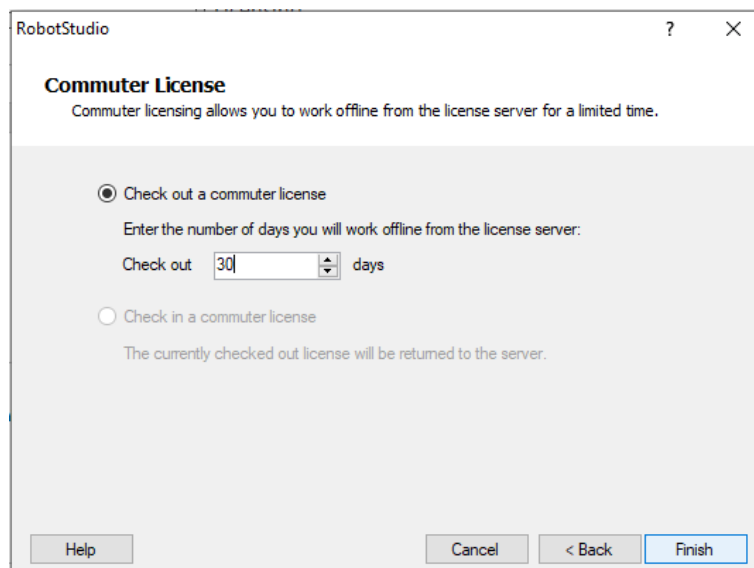


Figure 6: The RobotStudio Activate window

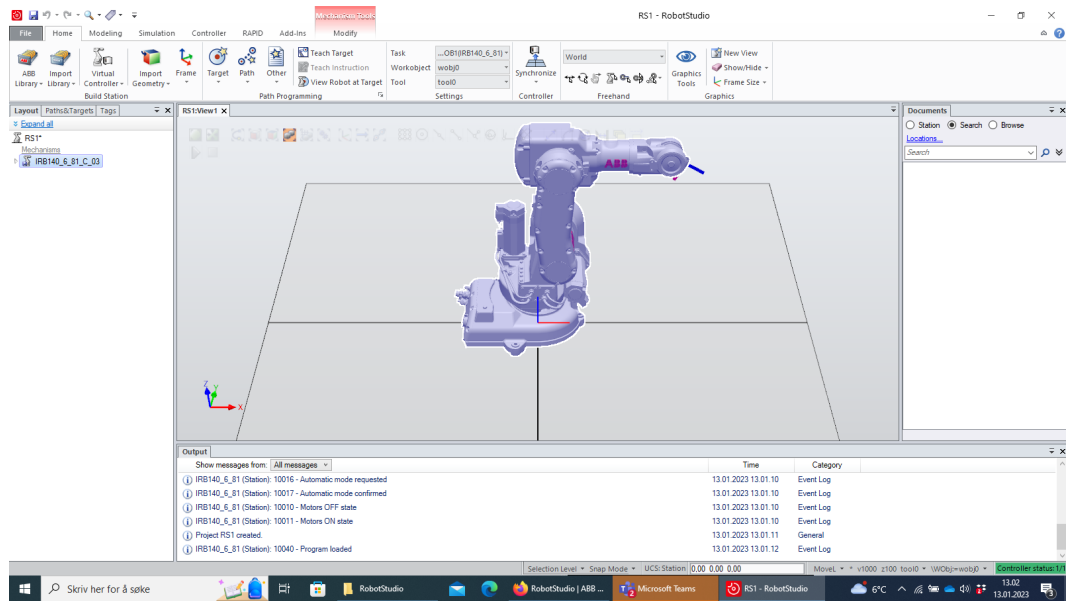


Figure 7: The RobotStudio window after a new project has been created. Notice the green background for the controller status in the lower right.

## 1.2 Learn RobotStudio

To learn RobotStudio is very ambitious point to include here. It is not realistic to expect that you will be a RobotStudio expert after some few hours of study, however I hope you will get an overview of the program, and get sufficient knowledge to search for, and find, relevant documentation for the tasks to do in the RS assignments.

You should examine [Help] menu under the {File}-tab, and browse the comprehensive RobotStudio documentation. The RAPID documentation inside the IRC5 documentation box is very relevant, in particular the RAPID overview document and the document on Instructions, Functions and Data types. In the RAPID overview document the first parts of Basic RAPID programming and the the first parts of Motion and I/O programming are especially useful.

When you have an overview of the help documentation you may go back to RobotStudio program and switch to the {Home}-tab. You will need to refer to the documentation all the time when you use RobotStudio, at least for the first years.

When a **project**<sup>4</sup> is created the screen may look like in figure 7. A project can contain several stations and program modules. You should locate your project folder, on my laptop the RS1 project folder is C:\Dokumenter\RobotStudio\

<sup>4</sup>In older versions of RobotStudio the term “Solution” was used instead of the term “Project”.



Projects\RS1. I observe that the first part here this actually is C:\Brukere\karl\Dokumenter\ i.e. the path C:\Users\karl\Documents\ translated to Norwegian. The redirection (or renaming) of catalog paths may be problematic for RobotStudio, especially if this redirection is into an actual network disk somewhere. This is the case for my desk computer with my standard UiS login, which correspond to a student login on a UiS network PC.

This problem is more explained in section 1.1.1, and as a consequence in this document the RobotStudio document folder is renamed (SUBST) as R:\ and thus this project location<sup>5</sup> is denoted as R:\Projects\RS1.

From a window like in figure 7 you may rotate and move the view of the robot, use **Ctrl** and **Shift** and mouse. The wheel on the mouse (if present) can be used to zoom in and out. You can give a project description in [Info] on {File}-tab. To end RobotStudio; {File}-tab and [Exit].

### 1.3 Attach tool to the robot

Start RobotStudio again and open the project; {File}-tab and [Open] and you probably find your project on the top of the list with the recent Stations and Projects, open it. A tool may be attached to the robot. The tool may be from a standard library of tools (Import Library - Equipment), or it can be specially designed for the customer. To design a tool in a proper way in RobotStudio is not a trivial task. Here, you should first use the tool for the UiS pen. If there is time, you may try an alternative tool in the end of this assignment.

Download library file [UISpenholder.rslib](#) ↗. This is actually a zip-file, and the web browser may rename it when you download the file, make sure the extension is **rslib**. In RobotStudio import the library file; {Home}-tab, [Import Library] and [Browse for Library] and locate the rslib-file and open it. The tool should appear in the {Layout}-sidebar just below the IRB-140 robot. You can now drag the tool onto the robot in the {Layout}-sidebar, **not** the graphics in {RS1:View1}- window. Update the position and the pen should be attached to the hand of the robot in {RS1:View1}-window. You may right click on the tool in the {Layout}-sidebar and a menu should appear, look at this but don't change anything now.

### 1.4 Include table and work object in station

Now, include the propeller table to the station; {Home}-tab, [Import Library] (the small down triangle in the lower right) and [Equipment]. The propeller table should be at the bottom of the list and appear in the {RS1:View1}-window when it is selected. You can now activate the “Snap Object”-item,

---

<sup>5</sup>The location on disk is denoted as folder, directory or catalog, and given by a path

weakly shown in the top of the {RS1:View1}-window. A small ball is now shown at the closest object (point) near the tip of the mouse pointer (in the {RS1:View1}-window). When you left-click on the mouse this point is selected and the coordinates are shown in the status line at the bottom of the RobotStudio-window.

The four top corners of the table should have coordinates (425, 150, 308), (825, 150, 308), (825, -150, 308), and (425, -150, 308). Let us here denote these points as  $P_1$ ,  $P_2$ ,  $P_3$ , and  $P_4$  respectively. We will now create a coordinate system (work object) centered at  $P_4$  and x-axis towards  $P_3$  and y-axis towards  $P_1$  and thus z-axis upwards. Thus, the x-axis is along one long edge of the table and the y-axis along one short edge of the table.

In RobotStudio a work object is used to define all robot movements, the path a robot should follow is given by points related to a work object. In {Home}-tab a part of the menu (the ribbon<sup>6</sup>) contains three selection boxes stacked on top of each other: [Task], [Workobject] and [Tool]. Probably [Workobject] shows [wobj0]. Now we want the table as our work object with name **wobjTable**. See RAPID Data types documentation for the difference between **User Frame** and **Object Frame**.

Define the new work object using {Home}-tab, [Other] and [Create Workobject]. Left side bar will show the {Create Workobject} dialog window, see figure 8. Give the name as **wobjTable** and click on the User Frame **Frame by points** text, and then click on the small  button that appeared just right of this text. Now the three point input dialog appears, see figure 9.

The first given point should be the origin of the work object, the second point the direction along the x-axis and the third point gives the direction of the y-axis. To fill in values, click on first point in dialog window figure 8 (upper red box), the switch to the {RS1:View1}-window and zoom in on the table, select [Snap Object] from the see through symbols at the top of the {RS1:View1}-window, and click on the origin of the work object (top of corner of table), then give the other two points (two other table corners). You should notice that the z-values for all three points are 308 [mm]. Finish by pressing  and  and the work object is created and shown as an axis cross on the table in the {View1} window. The red line point in x-direction, the green line in y-direction and the blue line in z-direction. In the menu of the {Home}-tab the value of [Workobject] should be updated as well. If the axis system is not as you want it, delete it and try again.

The work object should be attached to table, so when table is moved the work object should follow. In the {Paths&Targets}-tab in the left sidebar (still under {Home}-tab) you can expand the tree, locate **wobjTable** and right click

---

<sup>6</sup>The ribbon can be minimized or show by pressing a small up- or down-arrow in the upper right part of the RobotStudio-window

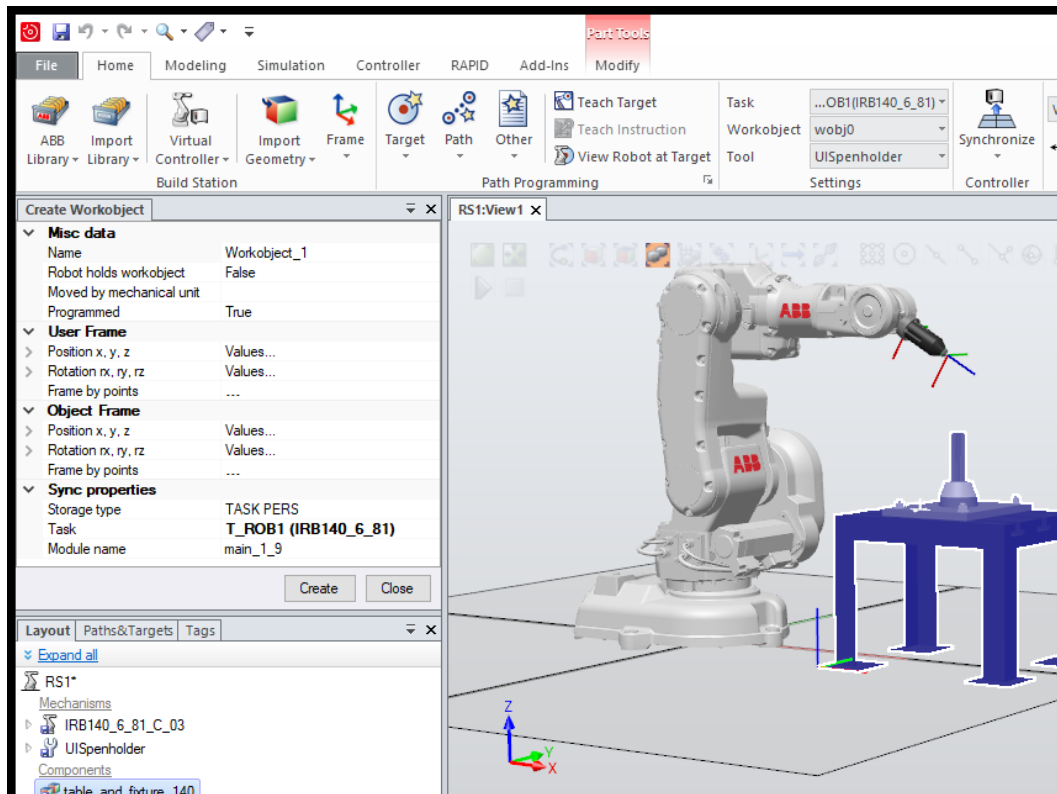


Figure 8: The upper left part of RobotStudio window when creating a work object.

on it. In the menu select [Attach to] and chose [table\_and\_fixture\_140] without updating the position. Check that when you move the table the work object follows.

When the table now is moved the work object should follow. Place the table with the long edge towards the robot, 100 mm closer to the robot and still centered in front of the robot. Notice that the top size of the table is  $400 \times 300$  [mm], but the local reference is on the outer corner of the plate of one of the legs, 25 [mm] outside the top (and 308 [mm] below). Rotate and translate the table ({Home}-tab and {Layout}-tab and right-click on table) to get the wanted position for both the table and the work object. The work object **wobjTable** should be on table corner left and close to the robot, denoted as  $P_4$  above. The world coordinates of the of this point, (origin of **wobjTable**) should be (325, 200, 308).  $P_1$  should have world-coordinates (625, 200, 308).

You can now store the project; click on the disk-icon (store symbol) in upper left part of the RobotStudio window. You may also store a copy of the project up to this point, {File}-tab and "Save Project As", change the description and save the project copy, ex. as RS1-5. Continue to work on the project RS1.

Position		Three-point	
First point on X axis (mm)			
425.00	-150.00	308.00	
Second point on X axis (mm)			
1000	0.00	0.00	
Point on Y axis (mm)			
0.00	1000.00	0.00	
Accept		Cancel	

Figure 9: The RobotStudio three point input dialog window. The first point, origin ( $P_4$ ), is already entered.

## 1.5 Define path

The robot has still not moved, but this will happen soon. In the menu of the {Home}-tab there is a section named **Freehand**, here a small robot symbol is for **Jog Joint**. Click on this and then on the robot and move a selected axis by dragging it. Also try the **Jog Linear** and **Jog Reorient** options.

Now is the time to **define the target points**. The first point we want to define is the upper left point (related to the robot) on the top of the table,  $P_4$ ; In the {Home}-tab [Target] select [Create Target] and a dialog window appears in the left side bar. Use work object as reference. When the red “Position” field is selected and “Add New”-line in “Points”-part in the “Create target”-dialog window is active (blue), you can simply click on the four points  $P_1$  to  $P_4$  in the {RS1:View}-tab, the “Snap Object” should still be active, and the four points are added to the Points-list. When this is done press **Create** and **Close**, the four points should now have been added to `wobjTable` in the {Paths&Targets}-tab.

In the {Paths&Targets}-tab in the left sidebar (still under {Home}-tab) you can expand the tree, locate `wobjTable` and find the target point under this branch. The orientation of the four points can be changed simultaneously: select the points, right-click and select “Modify Target” and “Rotate” on the popup-menu. In the Dialog-window that appears, let “Reference” be “Local” and rotate 180 degrees around x-axis, and perhaps also 90 degrees around z-axis. Then close the dialog window.

Now is the time to **define the path**. In the {Home}-tab [Path] select [Empty Path] and `Path_10` path appears under the **Paths&Procedures** branch in the {Paths&Targets}-tab in the left sidebar. The four target points can now be dragged and dropped into the path, start and end with `Target_10`. The Path

is also shown as a yellow curve in the {View1} window, we note that the curve is smooth in the corners and do not touch the points, except for the start and end point. We want a smooth path, but still want to move closer to the target points. Right click on all of the MoveL target points in the path, one by one or all at once, select [Modify Instruction] and [Zone] and select z5. You should see that the path, the yellow curve in the {View1} window, is modified.

You can now store the project; click on the disk-icon (store symbol) in upper left part of the RobotStudio window.

## 1.6 Check path

Now we want to check the path. First if the robot can reach all target points; Right click on a target point in the wobjTable branch of the tree in the {Paths&Targets}-tab in the left sidebar of the {Home}-tab. Select [View Robot at Target] and the robot and its tool should be moved to this point in the {View1} window. Do this for all points.

Even if the path seems to be good there may still be problems as not only the target points must be reachable but also all points along the path must be reachable. To check this a program must be made and a simulation must be run.

## 1.7 Make RAPID program

A RAPID program can be generated from the station. From the {Home}-tab on the main menu, select [Synchronize] and [Synchronize to RAPID], set all modules in the dialog window that appears to Module1 and make sure that all boxes for synchronizing are checked and then click  button.

Select the {RAPID}-tab on the main menu. Expand the tree in the {Controller}-tab in the left sidebar of the {RAPID}-tab and double click on the program module Module1, this module now appears in the main section of the window. Observe how the UISpenholder-, the wobjTable- and robtargset-variables are defined. Also note that PROC Path\_10() is defined but PROC main() is empty. Add a line in main function like below

```
1 !Add your code here
2 Path_10;
```

You may also update the comments with some relevant information. Look closer at all code in this file and try to understand the instructions used, the RAPID syntax may look a little bit awkward but this is how it is. In particular, look at the MoveL instruction in RAPID documentation.

You should now apply the changes (store): From the {RAPID}-tab on the main menu, select [Apply] and [Apply All]. You may now synchronize program back to the Station: From the {RAPID}-tab on the main menu, select [Synchronize] and [Synchronize to Station], set all modules in the dialog window that appears to **Module1** and make sure that all boxes for synchronizing are checked and then click OK button.

You can now store the project; click on the disk-icon (store symbol) in upper left part of the RobotStudio window. You may also make an additional copy of the RAPID-code, this is what you will need if you want to run the program on an actual robot. From the {RAPID}-tab on the main menu, in the expanded {Controller}-tab to the left you will find the module **Module1** and store it somewhere under the name **RS1\_8.mod** as **Module1** is more difficult to refer to later. Note that the tab in the RAPID-code-window now says **RS1\_8.mod**, thus if you make more changes here they are only applied to the copy (if stored) and not to the **T\_ROB1/Module1** connected to the project. I recommend that you close this copy and open the connected RAPID-code module by clicking on it again, in the expanded {Controller}-tab to the left it still is **Module1**.

If the program code consists of several modules, all modules, and a pgf-file, can be stored in a program folder. This folder is what to copy and use when a program should be moved to our actual robot, the station corresponds to the physical environment of the robot and can not be copied into the real physical world, a similar environment must be built if it is wanted. To save the complete program right click on **T\_ROB1** in the expanded {Controller}-tab to the left and select “Save Program As”.

## 1.8 Simulation

You may now go to simulation. Select the {Simulation}-tab on the main menu, select [Play] and hopefully the program starts and the simulation runs as expected. To slow down the simulation: Select [Simulation Control], a small symbol to the right of text [Simulation Control] below the Play symbol in menu, then set simulation speed to 20% in the dialog window. Run simulation again. You may also see the other options for [Simulation Control], perhaps even try some.

You can now store the project; click on the disk-icon (store symbol) in upper left part of the RobotStudio window. You may also store a copy of the project up to this point, {File}-tab and “Save Project As”, change the description and save the project copy, ex. as RS1-9. Continue to work on the project RS1.

## 1.9 Another path

Add a new path `Path_20` consisting of four new target points `Target_50`, `Target_60`, `Target_70` and `Target_80`, each point is the corner of the (metal) block bolted to the table. Follow the procedure used for `Path_10`. Add `Path_20` to PROC `main()` and run simulation again.

## 1.10 Use collision set

Simulation can test if collisions will happen, both by close inspection of the robot path during simulation and by the use of collision sets. In the {Simulation}-tab on the main menu, select [Create Collision Set] and a new collision set will appear in the tree under {Layout}-tab in the sidebar. Drag and drop both the `UISpenholder` and `table_and_fixture_140` into `ObjectsA` and `ObjectsB` of this collision set respectively. Run simulation again and note that a collision happens, the pen touches the table.

Move `wobjTable` 1 mm up in the {Paths&Targets}-tab in the left sidebar of the {Home}-tab. The Synchronize to RAPID, note the change in the RAPID code, and run simulation again. This time hopefully without any collision. You can now store the project; click on the disk-icon (store symbol) in upper left part of the RobotStudio window. You may also store a copy of the project up to this point, {File}-tab and “Save Project As”, change the description and save the project copy, ex. as RS1-11. Continue to work on the project RS1.

If everything is done and you have documented that each of you have used more than 15 hours on this assignment you may show the simulation to the teacher, submit your RAPID code in *canvas* and the assignment is done if your work is accepted. If you still have some time left try the next two sections too.

## 1.11 Another path

Add a path `Path_30` that moves the pen 10 mm above the center of each of the four bolts, note that the center of each bolt is 17 mm above the block and thus 32 mm above the table. On each bolt the pen should be moved down 12 mm (activating a collision) and then move the pen up again before continuing to the next bolt. You should define the points as the center of the top of each bolt, and use the RAPID `Offs()` function to define the path. Note that the the points should be defined relative to a work object aligned with the top of the table, like the other target points. When the collision test is run again the work object should again be 1 mm above the table, thus collision will be detected only when the tool press down on the bolts.

This path should also be added to the main menu. Also add to main a `moveL`

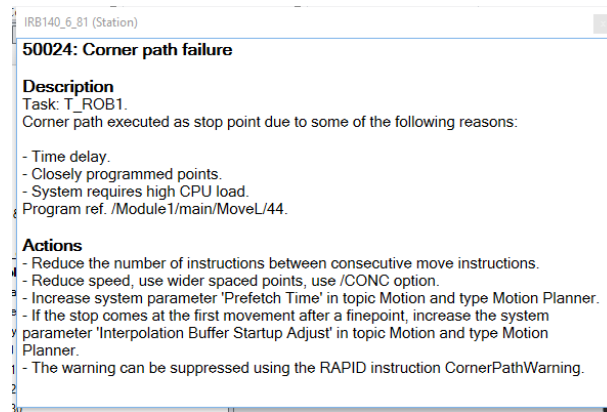


Figure 10: Corner Path Warning may occur in last instruction of a program, perhaps elsewhere as well.

instruction before `Path_10` and after `Path_30`, here use a target point 20 mm above the shaft centered on the table. The last instruction of the RAPID program may cause a Corner Path Warning, figure 10. This is not serious, and can easily be suppressed. Check simulation.

You should now store a copy of the project up to this point, as much changes will be done when the tool is changed in the next section. Continue to work on the project RS1.

Check simulation. You can now store the program and the station again. You should now show the simulation to the teacher, and submit your code in *canvas* and the assignment is done.

## 1.12 Alternative tool

This part is optional. You should only do it if you have more time, the assignment should be 15-20 hours.

In section 1.3 you used the tool `UISpenholder`. Now you can replace this by the [Pen] from “Training Objects” in {Home}-tab [Import Library] and [Equipment]. Note that this tool is more difficult to use, and that it may happen that you need to reorient or reconfigure some of the target points. Try your best to solve this. Check simulation. You can now store the program and the station again.

You should now show the simulation to the teacher, submit your code in *canvas* and the assignment is done.



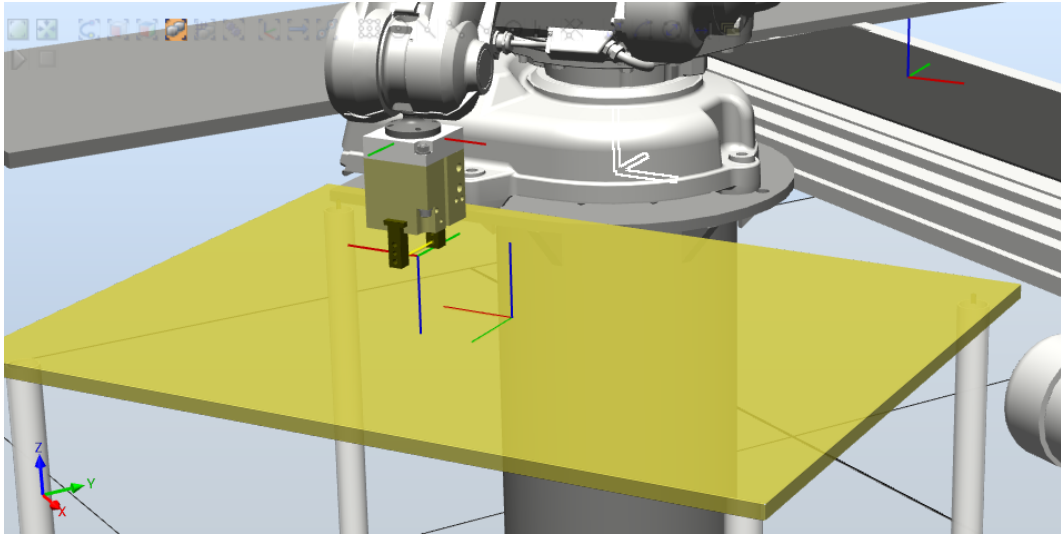


Figure 11: Figure shows Norbert and the table in standard position by its side. The x- and y-axis, red and green lines, for tool `tool0` is shown above the gripper, at the end of the robot hand. The work object `wobj0` is shown (weak) in the robot base. The work object `wobjTableN` is shown in the middle of the table, also axis for the tool `tGripper` is shown. The axis cross on the conveyor belt is where `wobjTableR` will be when (erroneously) used with Norbert.

### 1.13 Noen begrep i RobotStudio

This section is only in Norwegian. All students have the complete RobotStudio documentation available from RobotStudio, Help-section under {File}-tab. The RobotStudio Help document has in appendix B a Terminology section. This has much more terms explained than the few terms included below. Even so, some explanation in Norwegian might be helpful for some students.

Det er viktig å få riktig forståelse av sentrale begreper brukt i RobotStudio. Begrepene er greit forklart på engelsk i dokumentasjonen, men som en liten hjelp til norskspråklige studenter følger en kort norsk forklaring.

**Robot:** En fysisk robot (manipulatorarm).

**Controller:** Styreskap med elektronikk og programvare som styrer roboten.

**System:** Et robotsystem er den fysiske roboten med styreskap og tilhørende programvare. I ELE610 bruker vi to robotsystem på E458, Rudolf og Norbert. Flere robotsystem som jobber sammen kalles gjerne ei *robot-celle*.

**Station:** I RobotStudio er en stasjon en *modell* av den fysiske roboten. Stasjonen inkluderer også (deler av) omgivelsene og verktøy og arbeidsstykker knyttet til roboten. Det kan være litt forvirrende at en stasjon også inneholder {Paths&Targets} som beskriver baner og målpunkt, men de må være med for å vises i modellen. Disse kan synkroniseres med baner og målpunkt i RAPID program, de må være i programmet for å kunne utføres av den virtuelle kontrolleren.

**Virtual Controller:** Dette er et program, eller en programdel i RobotStudio som kalles RobotWare. Denne gjør det mulig å styre både den fysiske roboten og modellen av denne, altså simulere bevegelser i stasjonen.

**Program:** Et RAPID program består av en eller flere moduler som er lastet inn i en kontroller (fysisk eller virtuell) og som styrer kontrolleren og dermed roboten. Generelt skal et og samme program kunne brukes både på fysisk og virtuell kontroller og gi samme resultat, men det kan være noen ulikheter i grensesnitt, definisjon og virkemåte for IO-signal. For å flytte et program, men ikke stasjonen, fra en PC til en annen PC (eller til selve roboten på E458) er det hensiktsmessig å lagre hele programmet, alle moduler som inngår i programmet, på en egen katalog: Høyreklikk på programnavnet i treet i venstre del av skjermen og velg [Save Program As].

**Module:** Dette er en del av et program. For et program skal det være definert en, og kun en, funksjon `main()`. Generelt må ingen navn være definert flere ganger i de moduler som inngår i et program. Typisk for

vår bruk så er det hensiktsmessig å samle det meste av programmet i en modul, gjerne med `main_x.y.mod` der (x,y) er (øvingsnummer, delnummer). Merk at main-funksjonen uansett må ha navn `main()`.

Det er ofte hensiktsmessig å lagre en modul i ei fil (med samme navn som modulen), høyreklikk på modulnavnet i treet i venstre del av skjermen og velg [Save Module As]. En kan også trykke `Ctrl` + `S` i editoren (når en har endringer som ikke er lagret), men nå må en følge med, editoren skifter nå til å vise lagret fil og ikke den modul-fila som tilhører stasjonen, lukker en fila som editoren viser og åpner fila tilhørende stasjonen ser en at denne **ikke** er oppdatert. For å unngå dette må en lagre modul i stasjonen først, [Apply] i [Controller] delen under {RAPID}-fane. For å lagre alle moduler i stasjonen [Apply All] så kan en bruke taskekombinasjonen `Ctrl` + `Shift` + `S`.

**Project:** Et prosjekt i RobotStudio består av de filer som lagres som en enhet, det vil si i en katalog med underkataloger under `R:\RobotStudio\Projects`.

**Solution:** Tidligere ble et prosjekt kalla ei løsning. Ei løsning (solution) i RobotStudio består av både en stasjon, en (eller flere) virtuell(e) kontroller(e), og program. En kan si at dette tilsvarer det fysiske system.

**FlexPendant:** Et betjeningspanel, skjerm med styreknapper, som henger i enden av en tjukk kabel tilknyttet kontrolleren for hver robot. I tidligere versjoner ble tilsvarende enhet kalla *TeachPendant*. Det er også en virtuell FlexPendant i RobotStudio.

**RAPID** Programmeringsspråket som brukes i RobotStudio. Hjelpetekst er tilgjengelig under {File}-fane, {Help} i venstre del og dokumentasjon *RAPID Instructions, Functions and Data type*. Bruk denne så ofte dere har bruk for den.

**Synkronisering:** I {RAPID}-fane er det et ikon for synkronisering mellom RAPID-kode og punkt, baner, verktøy og *work object* i modellen, altså *Station*. Dette kan gjøres begge veier, og kan være ganske forvirrende på den måte at ikke alle endringer en gjør i RAPID kan overføres til modellen (*Station*) og tilsvarende andre veien. Det kan også være feil som gjør at synkronisering ikke er mulig, disse er ikke alltid like enkle å finne. En skal også være klar over at programmerte baner ikke vil overføres fra RAPID til modell, baner i modellen må være med navngitte punkt. Det kan også være nødvendig å utvide treet som viser hvilke elementer som skal synkroniseres for å se hvilken modul hvert enkelt element synkroniseres til eller fra. Kanskje bør en kun velge noen enkelte greiner i treet som skal synkroniseres.

**PCSDK** Et (C#, C++, ...) interface (grensesnitt) for tilgang til kjørende RAPID-program fra andre utviklingsverktøy. For eksempel kan Matlab


via PCSDK lese og endre verdier på variabler i et RAPID-program *mens programmet kjører*.

**robtarg** En dataklasse som brukes i RAPID (og PCSDK). Denne beskriver et mål-punkt sin posisjon og ønsket orientering for verktøyet i dette. Når roboten går til et punkt vil han forsøke å plassere verktøyet sitt aksekors (tooldata) samme sted og med samme orientering som punktet sitt aksekors som er punktkoordinater relativt til gjeldende *work object*.

**tooldata** En dataklasse som brukes i RAPID (og PCSDK). Denne beskriver et verktøy, med plassering i forhold til senter i robotens ytterste ledd og orientering i forhold til retning for robotens ytterste ledd.. **tool0** er et *tooldata* som alltid er definert in system module **BASE**, se figur 11.

**work object** En dataklasse som brukes i RAPID (og PCSDK). Dette angir koordinatsystem som **robtarg** forholder seg til. **wobj0** er et *work object* som alltid er definert in system module **BASE**, se figur 11.

**pos** Dataklasse for posisjon som brukes i RAPID (og PCSDK). Denne er en del av både *tooldata* (relativt til **tool0**), *work object* (relativt til **wobj0**, robotens base) og *robtarg* (relativt til brukt *work object*). Posisjon gis inn med 3 tall som er forflytning lang x-akse, y-akse og z-akse i millimeter. Eksempel for **wobjTableN** i figur 11 er [150,-500,8].

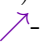**orient** Dataklasse for orientering (retning) som brukes i RAPID (og PCSDK). Denne er en del av både *tooldata* (relativt til **tool0**), *work object* (relativt til **wobj0**, robotens base) og *robtarg* (relativt til brukt *work object*). Orientering gis inn med 4 tall som er representasjon på **quaternion** -form, eksempel [q1,q2,q3,q4] der en har  $q_1^2 + q_2^2 + q_3^2 + q_4^2 = 1$ . Ingen rotasjon er gitt som [1,0,0,0], rotasjon 180 grader om x-akse er [0,1,0,0], rotasjon 180 grader om y-akse er [0,0,1,0] og rotasjon 180 grader om z-akse er [0,0,0,1]. Rotasjon  $g$  grader om x-akse er [c,s,0,0], rotasjon  $g$  grader om y-akse er [c,0,s,0] og rotasjon  $g$  grader om z-akse er [c,0,0,s], der c og s er henholdsvis cosinus og sinus til **halve** vinkelen  $\theta = g \cdot \pi/360$ .